

ASSEMBLY INSTRUCTIONS – Steps 1 to 10


PARTS LIST

- 2 x (A) post 2-way 57"H
- 2 x (B) post H 2-way 57"H
- 1 x (C) post 2-way 37"H
- 2 x (D) post 1-way 37"H
- 2 x (1) panel 8"H x 36"W
- 2 x (1a) panel 16"H x 36"W
- 2 x (1b) panel 16"H x 24"W
- 2 x (2) raceway panel 36"W
- 3 x (3) rail panel 36"W
- 2 x (4) panel 16"H x 36"W
- 1 x (4a) board 16"H x 36"W
- 6 x (5) panel cap
- 2 x (6) filler piece
- 5 x (7) work top bracket
- 2 x (7a) central cantilever
- 1 x (8) shelf 36"W
- 3 x (9) worktop set 72" x 72"
- 7 x (10) post cap kit

- TOOLS needed: 1 philips screwdriver or 1 electric drill
- QUESTIONS: call 1-888-880-CUBE or for more info visit www.cubeinabox.com

Tip for 7

Note the mark on each post to ease height adjustment. You can use a screw driver to squeeze the chromed screw

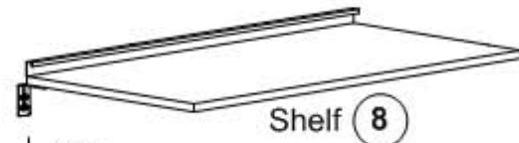

Tip for 8


At first, slide down the 2 side parts (chromed wire) on posts, then adjust the shelf on top of the 4 black plastic supports and screw from underneath

9 Worktop set




Tip for 9


Use the 3/4" black wood screws with an electric drill from underneath the worktops

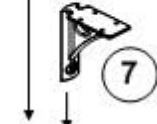



Slide filler piece down into post

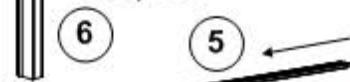

Central cantilever

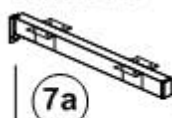


Slide all panel caps from side

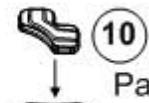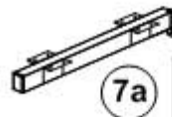

Panel caps

Tip for 10

Use the 1/2" metal screws to cap posts

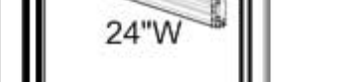

Tip for 1 1a
Slide first panel (1) in between posts A-B, then panel (1a) in between A-B

Tip for 2

First, slide down the frame of the raceway in between posts A-B, then place the two "cavaliers" (small plastic molded parts) used to hold the doors on each side

Tip for 3

The rail panel has to be installed facing up to allow trays to hang on it

