

PACKING LIST

Ready-to-Work
Office Cubicles

(1) Post **A**
End-post 37H



(1) Post **B**
2-way 37H



(1) Post **C**
2-way 57H



(1) Post **D**
End-post 57H




(2) 2-way metal-cap and
(2) 2-way plastic cap



(2) end-post metal-cap and
(2) end-post plastic cap




(1) shelf 41W with
(2) shelf-support and
(2) book-holder

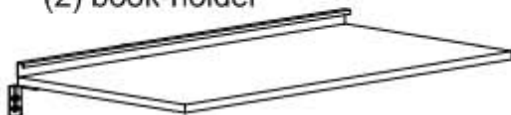

(1) panel 28W **1T**
with alu top cap



(1) panel 53W **2T**
with alu top cap

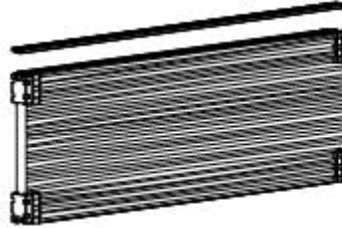

(1) filler for post



(4) bracket




(1) curvilinear corner top
53W x 52W

(1) half-panel 41W **3**




(1) raceway-panel 41W **4**

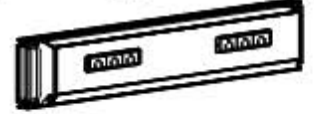


(1) rail-panel 41W **5**



(1) panel 41W **6T**
with alu top cap

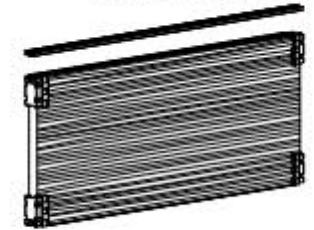

(1) pencil box

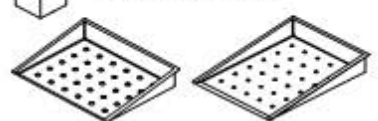

(2) paper tray for rail tiles

Cube in-a-Box – V5.series – Assembly Instructions

1



Unpack all the parts, check quantities with the packing list. If there is a problem with the count, call our customer service at 1-888-880-2823 (Pacific Time) or email at infosales@cubeinabox.com

2



Slide panel 1T* (28"W) in between end-post A (37"H), and 2-way post B (37"H). Then slide panel 2T (53"W) in between post B and 2-way post C (57"H).
*TIP 1: letter T is for panels with a pre-installed alu cap.

3



Use a rubber hammer and make sure all panels are pushed all the way down.

4






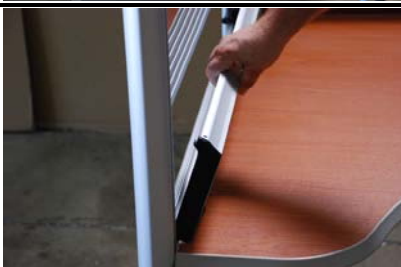









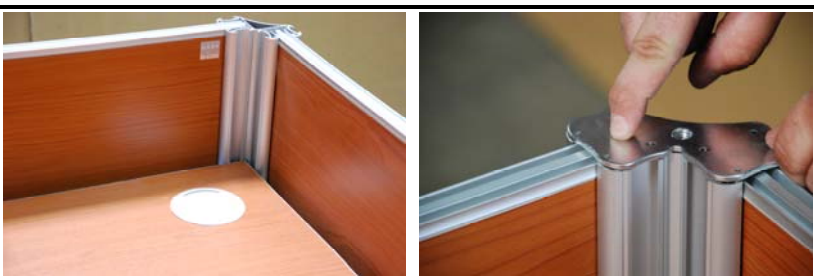
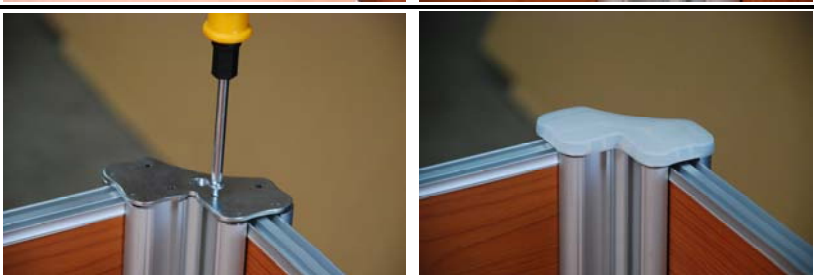
Slide half-panel 3 (41"W) in between post C (57"H) and end-post D (57"H). Then slide raceway-panel 4 (41"W) on top.

5



Slide rail-panel 5** (41"W) on top of raceway-panel 3, and panel 6T (41"W) on top.
**TIP 2: Rail-panel must be installed with hooks facing up so trays can hold on it.

6			<p>Assemble the 2 wire-guides and slide/adjust them into posts where you will need them, preferably under work top level.</p>
7			<p>Check and assemble all the brackets. Use big chromed-screws here. Adjust the brackets to the mark level (dot) on posts.</p>
8			<p>Repeat for all brackets. You just need to tighten the big chromed- screw to make it hold.</p>
9			<p>Use a leveler to adjust the work-top. Use an electric drill from underneath to screw the top with black wood-screws. Insert filler on 2-way post C.</p>
10			<p>Display the raceway-cap by adjusting at the bottom into the black plastic molded piece on each side.</p>
11			<p>Press slightly on top of each side into the frame.</p>
12			<p>Check and assemble the two shelf-supports with the big chromed-screws. Slide each support into the posts where you want the shelf to be displayed.</p>

13		<p>Adjust both shelf-supports at the height of your choice. Display the shelf on top of the shelf-supports.</p>
14		<p>Push vertically on each of the 4 black plastic brackets until it fits in. Then push the shelf against the panel.</p>
15		<p>Display the book-holders as per the holes. Use a leveler to adjust the shelf-supports height.</p>
16		<p>Place the grommet-cap on the work-top hole. Place all the metal-caps on top of each post,</p>
17		<p>Use a screw driver to tighten them with the flat self tapping metal-screws. Place magnet plastic-caps on top of each post.</p>
18		<p>YOU ARE DONE!!</p>